

## D2 ADJUSTABLE STOP

### NOTES:

- 1) REMOVE HEX NUT AND LOCKWASHER
- 2) LIFT AND ROTATE ADJUSTABLE STOP TO DESIRED POSITION
- 3) REPLACE LOCKWASHER AND HEX NUT.

